


# ESSE

500 Range

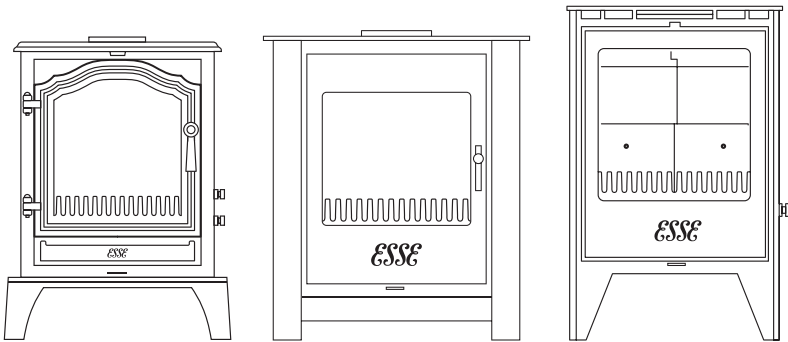

Multi-Fuel & Smoke Exempt  
Wood Burning Stoves

500, 525 & 550 models

INSTALLATION & USER INSTRUCTIONS  
*(TO BE LEFT WITH THE CUSTOMER)*



**MADE IN  
BRITAIN**<sup>®</sup>



## CONTENTS

General Safety Notes	Page 2	Operating Instructions	Page 17
Installation instructions	Page 3	Wood Burning	Page 20
Chimney & Flue	Page 4	Solid Fuel Burning	Page 23
Flue Draught	Page 6	Technical Information	Page 24
Flue Stabiliser	Page 7	Maintenance	Page 26
Dimensions & Clearances	Page 7	Guarantee	Page 26
Installing the Stove	Page 11	Spare Parts	Page 27
Commissioning Checklist	Page 15		

## GENERAL SAFETY NOTES

- Properly installed, operated and maintained, this appliance will not emit fumes into the dwelling. However occasional fumes from de-ashing and re-fuelling may occur. Persistent fume emission is potentially dangerous and must not be tolerated. If fume emission does persist, open doors and windows to ventilate the room. Let the fire burn out or eject and safely dispose of fuel from the appliance. Once the fire is cold, check the flue and chimney for blockages and clean if required. Do not attempt to relight the fire until the cause of the fume emission has been identified and corrected. Seek expert advice if necessary.
- Do not fit an extractor fan in the same room as the appliance.
- It is important that flue ways are cleaned frequently and the chimney swept regularly. Also the stove must be maintained in good mechanical order. Regular sweeping means at least once a year for smokeless fuel and a minimum of twice a year for other fuels.
- If the chimney was previously used for an open fire, it is possible that the higher flue gas temperatures generated by the stove may loosen deposits that were firmly adhering to the inner surface of the chimney and cause blockage of the flue pipe. We recommend that in such a situation a second sweeping of the chimney should be carried out within one month of regular use of the stove after installation. Also, lock or remove any existing dampers in the flue-way.
- Should it be likely that children, aged or infirm people approach the fire, then a fireguard should be fitted.
- Avoid the use of aerosol sprays in the vicinity of the stove when it is in operation.
- This appliance must be installed as per these instructions and regulations complied with. No modifications or alterations of any kind are permitted.

## THE CLEAN AIR ACT 1993 AND SMOKE CONTROL AREAS

Under the Clean Air Act local authorities may declare the whole or part of the district of the authority to be a smoke control area. It is an offence to emit smoke from a chimney of a building, from a furnace or from any fixed boiler if located in a designated smoke control area. It is also an offence to acquire an “unauthorised fuel” for use within a smoke control area unless it is used in an “exempt” appliance (“exempted” from the controls which generally apply in the smoke control area).

The Secretary of State for Environment, Food and Rural Affairs has powers under the Act to authorise smokeless fuels or exempt appliances for use in smoke control areas in England. In Scotland and Wales this power rests with Ministers in the devolved administrations for those countries. Separate legislation, the Clean Air (Northern Ireland) Order 1981, applies in Northern Ireland. Therefore it is a requirement that fuels burnt or obtained for use in smoke control areas have been “authorised” in Regulations and that appliances used to burn solid fuel in those areas (other than “authorised” fuels) have been exempted by an Order made and signed by the Secretary of State or Minister in the devolved administrations.

The 500 range has been recommended as suitable for use in smoke control areas when burning dry wood logs in accordance with these instructions. Peat and other unauthorised fuels must not be burnt in these appliances in smoke control areas.

Further information on the requirements of the Clean Air Act can be found here: <http://smokecontrol.defra.gov.uk/>

Your local authority is responsible for implementing the Clean Air Act 1993 including designation and supervision of smoke.

## INSTALLATION INSTRUCTIONS

- The installer has a responsibility under the Health and Safety at Work Act 1974 to provide for the safety of persons carrying out the installation.
- Attention is drawn to the fact that fire cement is caustic and hands must be washed thoroughly after use.
- The appliance is heavy and care must be taken during handling.
- Although the appliance does not contain asbestos products, it is possible that asbestos may be disturbed in existing installations and every precaution must be taken.

- These instructions give a guide for the installation of the appliance but in no way absolves the installer from responsibilities to conform to British Standards, in particular BS8303 and BS EN 15287:2007, relating to the installation of solid fuel appliances.
- All local regulations, including those referring to National and European standards need to be complied with when installing the appliance.
- Permanent ventilation may be required in accordance with the guidelines given in Approved Document J of The Building Regulations.

## CHIMNEY & FLUE

### CO Alarms

Building regulations require that whenever a new or replacement fixed solid fuel or wood/biomass appliance is installed in a dwelling, a carbon monoxide (CO) alarm must be fitted in the same room as the appliance, in accordance with BS EN 50292:2002. The installation of an alarm must not be considered a substitute for either installing the appliance correctly, or ensuring regular servicing and maintenance of the appliance and chimney system.

The successful operation of this appliance relies on the adequate performance of the Chimney to which it is connected.



This Appliance is not suitable for installations in a shared flue system.

The chimney must:

- Have an internal cross section of no less than 320cm<sup>2</sup> (Ø200mm). If a flue liner is used it should be 125mm diameter (5") and suitable for solid fuel.
- Be a minimum 4.5m high from hearth level to pot.
- Be terminated at least 1m above roof level so that the chimney does not terminate in a pressure zone (see Fig. 2).
- Be free from cracks, severe bends, voids and obstructions.
- Be connected to this one appliance only.
- New chimneys must be tested in accordance with HETAS requirements.

- If the stove is installed as a free standing appliance, it should not support any part of the chimney.
- Voids in the chimney should be avoided, as these will prevent a steady flue draught.
- The stove flue pipe should pass beyond the narrowing of the chimney (see Fig. 1).
- Consideration should be given to falling soot. For rear outlet stoves it may be necessary to provide a soot catchment area in the flue pipe so that soot does not settle in the path of the flue gases. The optional rear flue box attachment available from ESSE has a detachable base that allows for soot to be removed (See Fig. 1).
- A flue/chimney access point may also be required so that the state of the chimney can be checked and any fallen soot removed.
- External flues must be insulated to prevent heat loss.

Fig.1 – Ideal Flue Connections (Flue box available from [www.esse.com](http://www.esse.com))


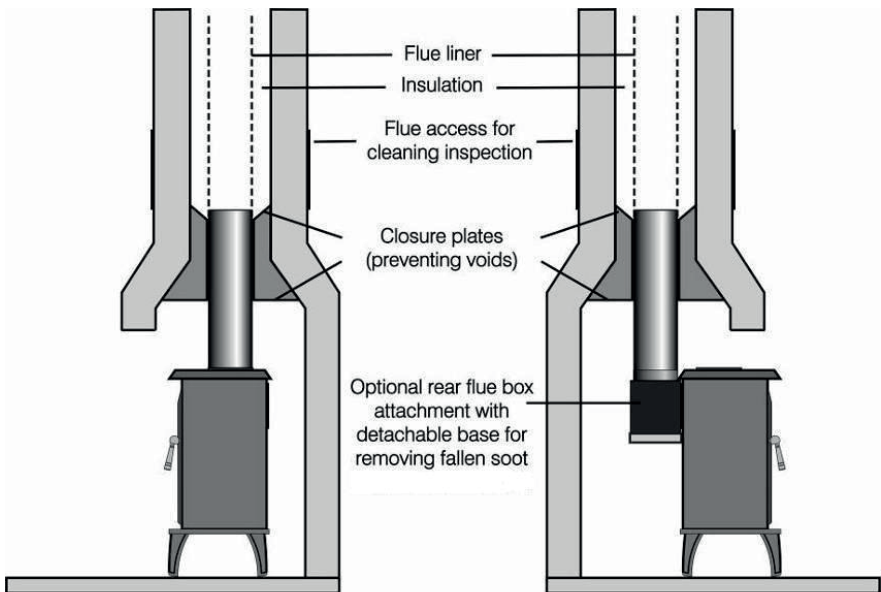


Fig.2 – Chimney and Flue Performance



## FLUE DRAUGHT

The chimney can be checked, before the stove is installed, with a smoke match. If the chimney doesn't pull the smoke it may suggest the chimney needs attention (see the Flue Diagnosis Table, below).

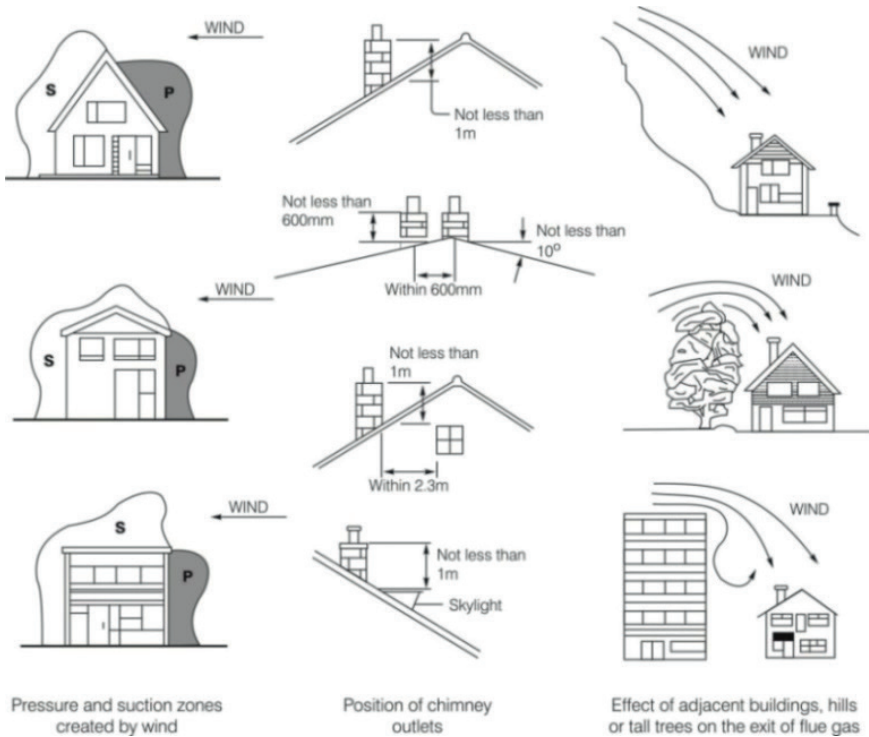

This test is only a guide as an apparently poor flue may improve once the stove is installed, lit and the flue is warmed. If, once the stove is installed, there is any doubt that the chimney is providing an adequate draught; a flue draught reading can be taken with the stove lit. Two flue draught readings should be taken, one with the stove at minimum rate and one at maximum rate.

## MEASUREMENTS

The flue draught test hole is located on the right hand side of the stove at the back near the top. Remove the screw to allow reading to be taken, replace the screw once readings are complete.

## MINIMUM

The stove should be lit and allowed to warm the flue thoroughly. The air control can then be set so that the stove burns on a low setting. Allow the burning rate to become steady. The flue draught reading should now be taken.

## MAXIMUM

The primary air intake can now be opened to allow the stove to burn at maximum rate. Give the stove some time for the burning rate to become steady, a flue draught reading can then be taken. Ideally, the flue draught reading should range between 1mm wg (10 Pa) and 2.5mm wg (25 Pa). Any readings significantly outside this range may indicate the need for remedial action.

**Low flue draught symptoms:** *difficult to light and smoke coming into the room.*

CAUSE	REMEDY
Cold chimney	Line the chimney
Chimney too short	Extend the chimney
Down draught	Relocate/extend chimney terminal. Fit an anti-down draught cowl
Chimney diameter too large	Line the chimney
Chimney obstruction	Clear/sweep the chimney
Restricted air supply	Check for competing draughts (other chimneys, extractor hoods/fans) - Fit an air vent if the room is sealed

**High flue draught symptoms:** *fire difficult to control, fuel will not last, stove too hot, stove damage, chimney fire, stove whistles whilst in operation.*

CAUSE	REMEDY
External wind conditions combined with chimney terminal	Fit stabiliser cowl Fit flue draught stabiliser


## FLUE STABILISER

A flue stabiliser can be fitted to reduce the draught through the stove if the flue draught is too high. The flue stabiliser should be:

- Fitted in the same room as the stove.
- The same size as the flue pipe.
- Fitted no closer than 700mm to the flue outlet of the appliance.

## DIMENSIONS & CLEARANCES

Fig.3-550 Stove Dimensions

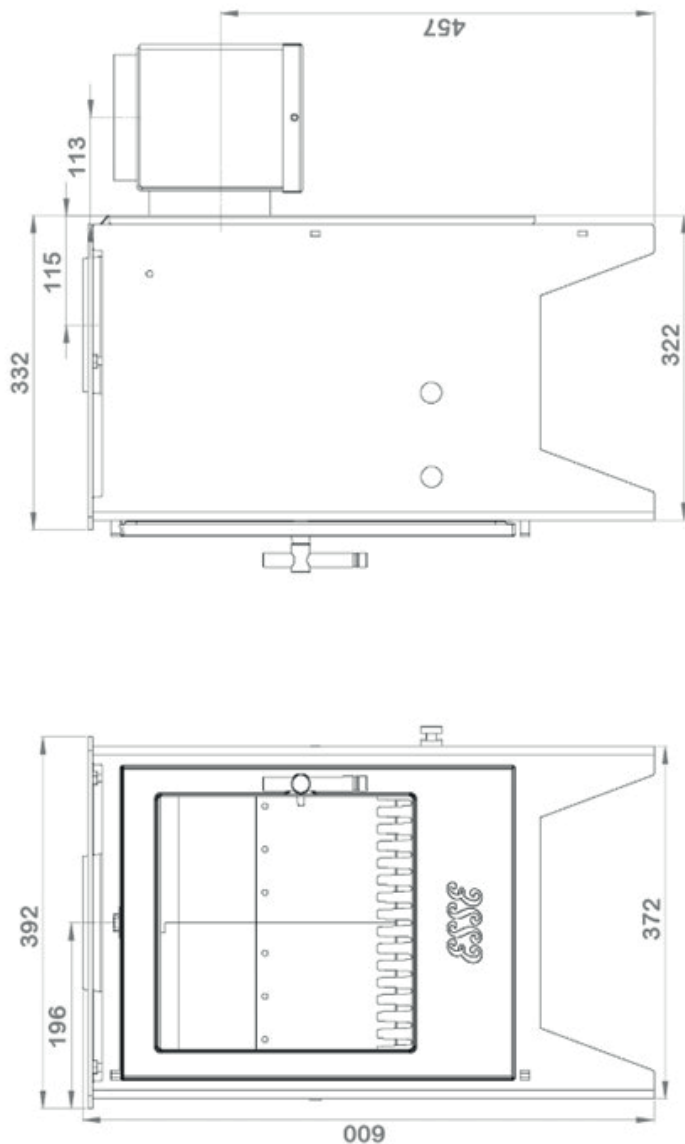


CLEARANCES	LHS	RHS	BACK	TOP	FRONT
NON-COMBUSTIBLES	150**	150**	-	200**	-
COMBUSTIBLES	400	400	400	450	305

\*\* PLEASE NOTE THAT THESE ARE ONLY SUGGESTED CLEARANCES.  
NOTE: ALL DIMENSIONS ARE IN MILLIMETERS




Fig.4- 525 Stove Dimensions

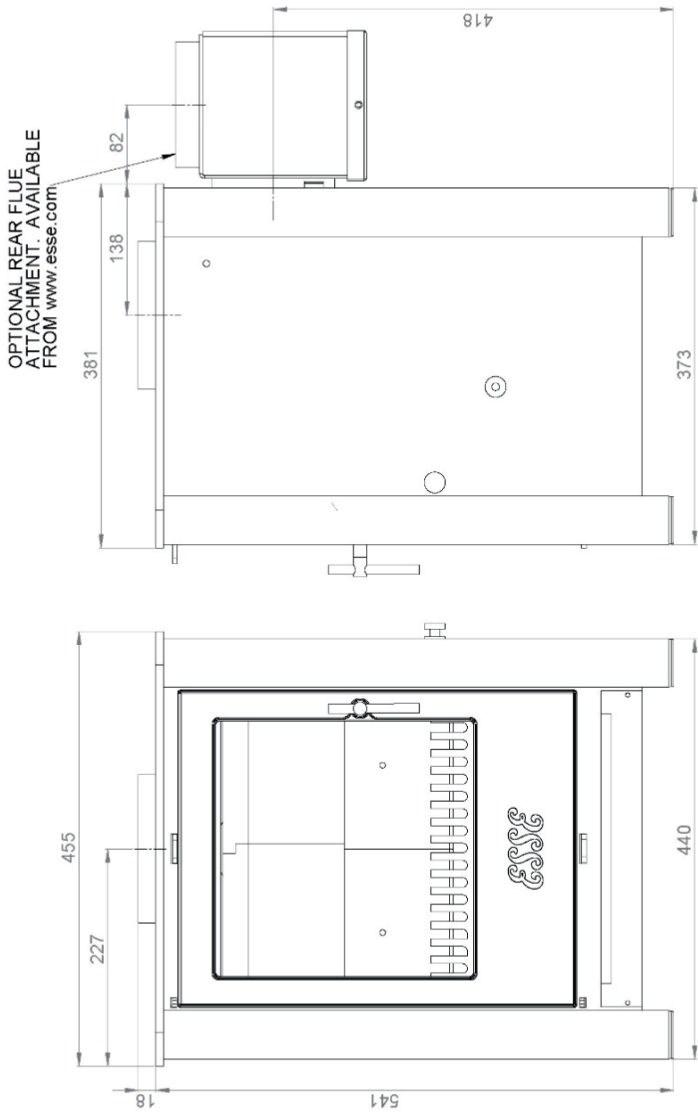

CLEARANCES	LHS	RHS	BACK	TOP	FRONT
NON-COMBUSTIBLES	150**	150**	-	200**	-
COMBUSTIBLES	400	400	400	450	305

\*\* PLEASE NOTE THAT THESE ARE ONLY SUGGESTED CLEARANCES.  
NOTE: ALL DIMENSIONS ARE IN MILLIMETERS


Fig.5 – ESSE 500 Stove Dimensions

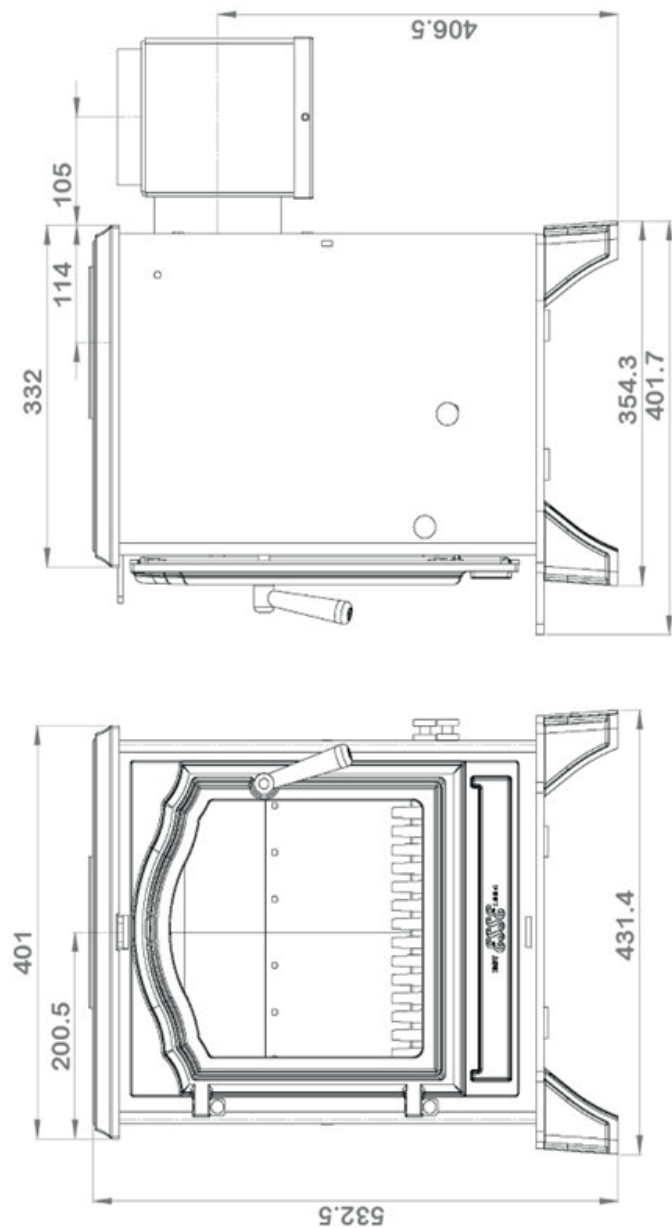

CLEARANCES	LHS	RHS	BACK	TOP	FRONT
NON-COMBUSTIBLES	150**	150**	-	200**	-
COMBUSTIBLES	400	400	400	450	305

\*\* PLEASE NOTE THAT THESE ARE ONLY SUGGESTED CLEARANCES.  
NOTE: ALL DIMENSIONS ARE IN MILLIMETERS

Fig.5 – ESSE 500 Stove Dimensions

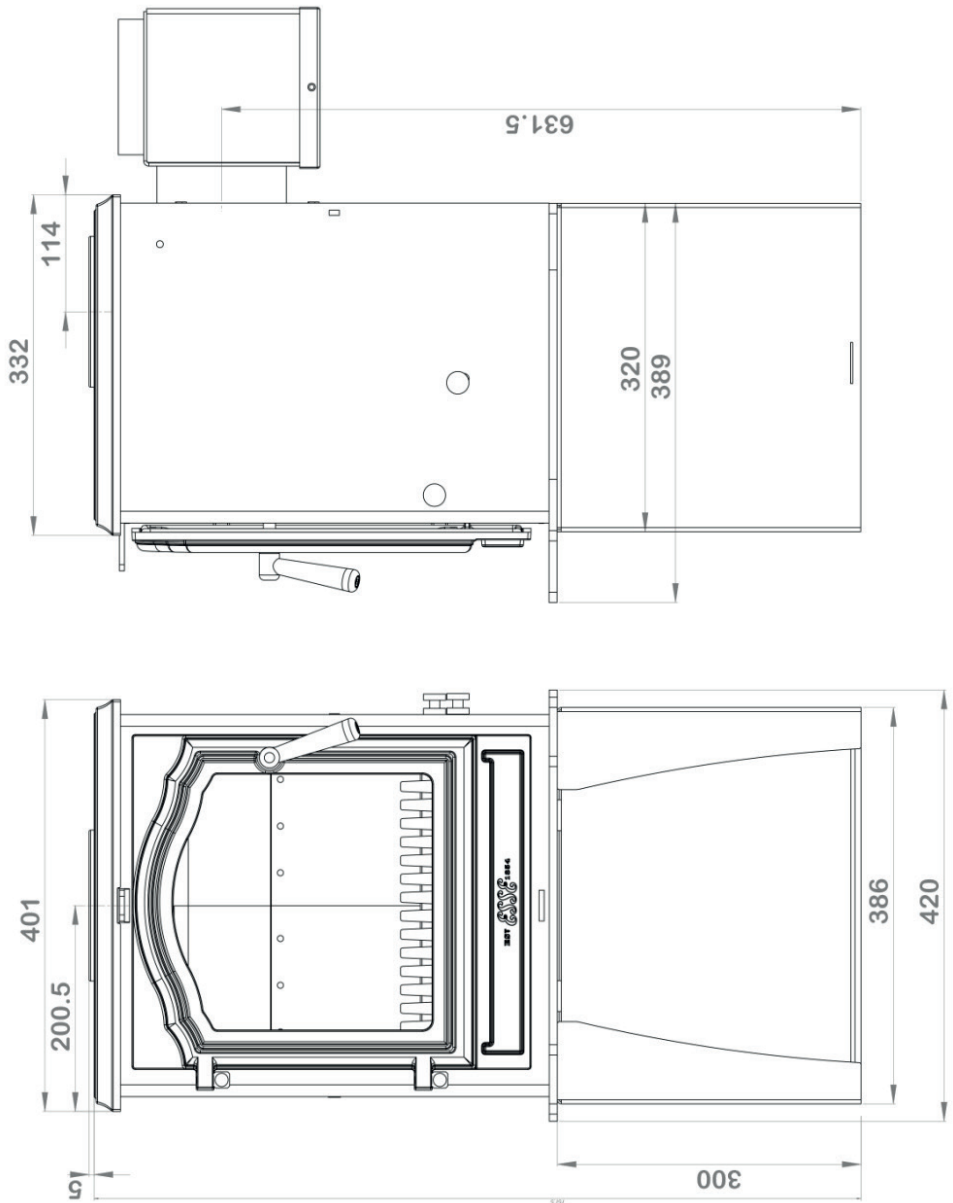

## INSTALLING THE STOVE

### POSITIONING

The overall dimensions of the stove are shown in Fig. 3 and 4 along with a table that indicates recommended distances between the stove and surrounding combustible materials. As a rule, any surrounding combustible material should not exceed 80°C. There should be sufficient space around the stove for service work.

### HEARTH

The construction of the hearth must conform to Building Regulations, must be firm, non-combustible and capable of supporting the stove. (Refer to Building Regulations Document J).

### FLUE CONNECTION

The flue pipe used to connect the stove to the chimney is 125mm (5") in diameter. The stove is supplied ready for top flue connection. To change to a rear connection, a cast rear flue collar kit or a rear flue box kit is available from [www.esse.com](http://www.esse.com). The flue blanking plug supplied with the kits is used to block the top flue outlet. The blanking plate in the rear of the stove must then be removed (to access the bolts attaching the blanking plate, the convector panel must first be removed) - see Fig. 7. The rear flue box attachment allows the stove to be installed further out of any building recess. Fig. 1 shows suitable flue connections.

### IMPORTANT INSTALLATION NOTES

1. The installation must allow for adequate chimney sweeping.
2. Avoid using bends greater than 45° to the vertical. All flue pipe sections should be as close to vertical as possible.
3. All joints in the flue system must be effectively sealed.
4. All flue sockets must face upwards.
5. Check the appliance for soundness of seals between castings and main components and that all supplied parts and fittings are correctly fitted.

On completing the installation, check that all the internal components of the stove are positioned correctly.

Check - Ash pan, iron grate, baffle, side and back bricks.




Leave the appliance operational and explain the operation of the stove to the customer. Leave all instructions and operating tools with the customer.



If rearrangement of the flue outlet connection is needed it must be made before the stove is positioned in the fireplace.


Fig.7 –ESSE 500 can be arranged for top or rear flue outlet.

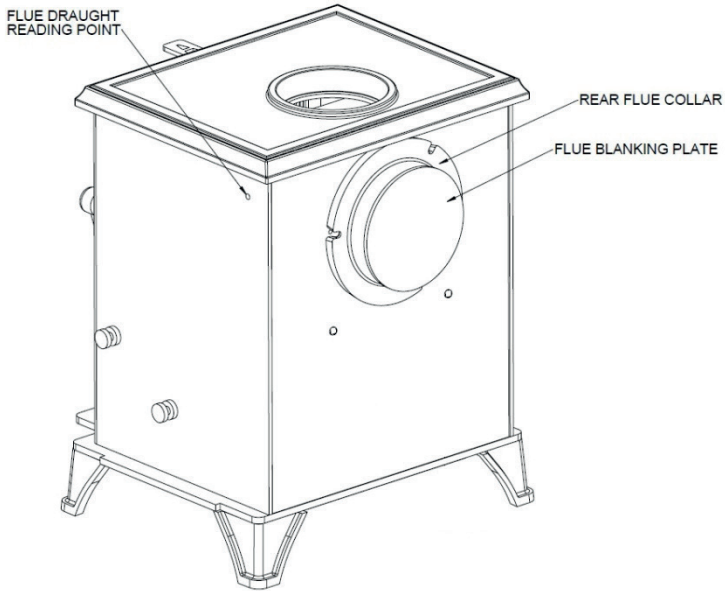

ESSE 500 Stove rear flue connection conversion.  
The stove is supplied ready for a top flue connection.

1. Unfasten the flue blanking plate.
2. Using the same bolts fasten either the optional Cast flue collar or Rear flue box.
3. Open the stove door and remove the baffle.
4. Fit the top flue blanking plug and attach the flue blanking bar.
5. The stove is now ready for a rear flue connection.

Fig.8 –ESSE 525 Arranging the flue for top or rear outlet.

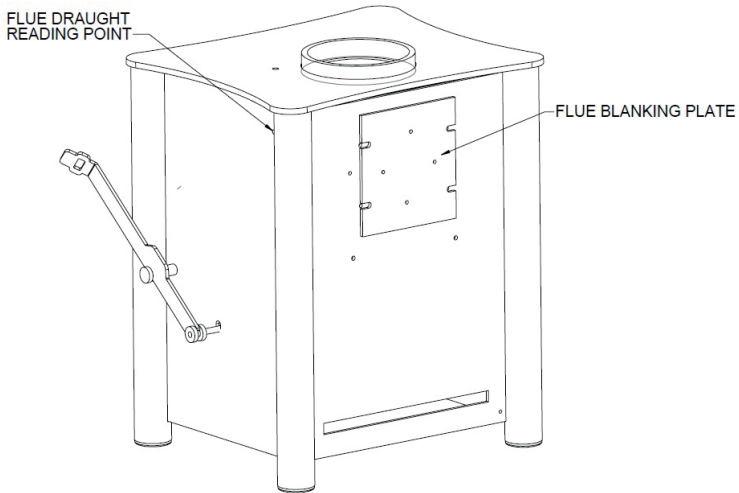


#### ESSE 525 Stove rear flue connection conversion.

The stove is supplied ready for a top flue connection.

1. Open door and remove baffle and back bricks.
2. Unfasten the nuts holding the stove lid down.
3. Remove the cast flue collar.
4. Remove the flue blanking plate.
5. Fit the flue blanking plate to the top of the stove.
6. Re-fit the stove top and tighten.
7. The stove is supplied with a stove top blanking disc. The screws in the flue blanking plate can be adjusted so that the stove top blanking disc can sit flush with the top.
8. Fit the cast flue collar to the rear of the stove.
9. Re-fit the rear and baffle bricks.
10. The stove is now ready for a rear flue connection.

Fig.9 –ESSE 550 Arranging the flue for top or rear outlet.

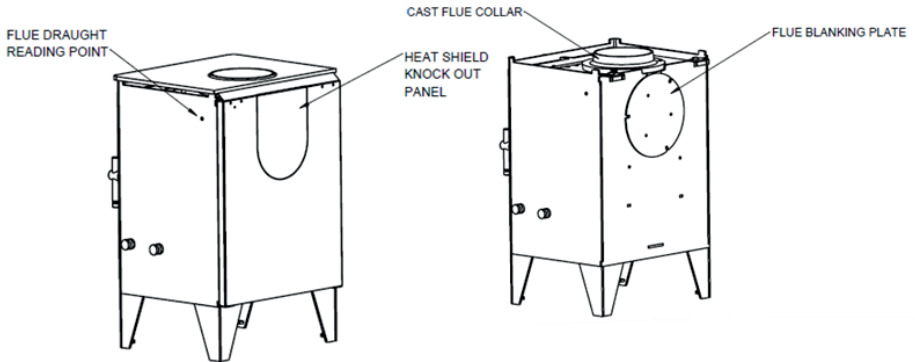

ESSE 550 Stove rear flue connection conversion.  
The stove is supplied ready for a top flue connection.

1. Open door and remove baffle and back bricks.
2. Unfasten the nuts holding the stove lid down.
3. Lift of stove lid.
4. Remove rear heatshield (ESSE 550 only).
5. Remove the cast flue collar.
6. Remove the flue blanking plate.
7. Fit the flue blanking plate to the top of the stove.
8. Re-fit the stove top and tighten.
9. The stove is supplied with a stove top blanking disc. The screws in the flue blanking plate can be adjusted so that the stove top blanking disc can sit flush with the top.
10. Fit the cast flue collar to the rear of the stove.
11. Remove the knock out panel from the rear heatshield (ESSE 550 only).
12. Re-fit the rear heatshield (ESSE 550 only).
13. Re-fit the rear and baffle bricks.
14. The stove is now ready for a rear flue connection.

## COMMISSIONING CHECKLIST

To assist with any potential guarantee claim please complete the following information.

### To be completed by the installer.

#### Dealer the appliance was purchased from

Name

Address

Telephone Number

#### ESSENTIAL information:

Date of installation

ESSE model

Serial number

#### Installation Engineer:

Name

Address

Telephone Number

#### Commissioning checks - To be completed & signed:

Is the flue system correct for this appliance?

(Insert reading here)

Flue swept and checked for soundness?

Yes  No

Smoke test completed on installed appliance?

Yes  No

Spillage test complete?

Yes  No

Has the use of the appliance, operation and controls been explained?

Yes  No

Clearance to combustible materials checked?

Yes  No

Instruction book handed to the customer?

Yes  No

CO Alarm fitted?

Yes  No

Signature.....

Print Name.....





## PRODUCT FICHE

Energy Labelling Directive - (EU) 2015/1187 for Solid Fuel Boilers and Packages of Solid Fuel Boilers, Supplementary Heaters, Temperature Controls and Solar Devices.

Manufacturer Name:	ESSE Engineering Ltd.
Model Name:	ESSE 500 Series
Energy Efficiency Class:	A+
Energy Efficiency Index:	108.2
Nominal Heat Output to Room:	5.0 kW
Nominal Heat Output to Water:	0.0 kW
Net Efficiency:	82.9

Comments / Installation / Handover Notes:

## OPERATING INSTRUCTIONS



Smoke Exempt stoves need to maintain an open air supply unlike a standard Multi-Fuel stove. As such the stove will not shut down like a standard Multi-Fuel Stove and is designed to continue to draw air so that it can meet local authority clean air act regulations.



Over firing will damage your stove.  
To maintain peak efficiency, your stove should burn approximately 1.0kg of well-seasoned wood per hour.



Your stove should not be used as an incinerator and only recommended fuels shall be used.



Parts of the appliance, especially the external surfaces, will be hot to touch when in operation and due care will need to be taken.

Additional loose parts supplied inside your stove include:

- A Stove Mitt – For removing the ash pan, adjusting the air control and operating the door handle.
- A Riddling Tool – For operating the riddling grate and lifting the ash pan in and out.
- A Flue Blanking Plug – To blank the top flue outlet if the rear outlet is to be used.



Always use stove mitts when adjusting controls and opening or closing the door.

Fig.9 –ESSE 550 Arranging the flue for top or rear outlet.

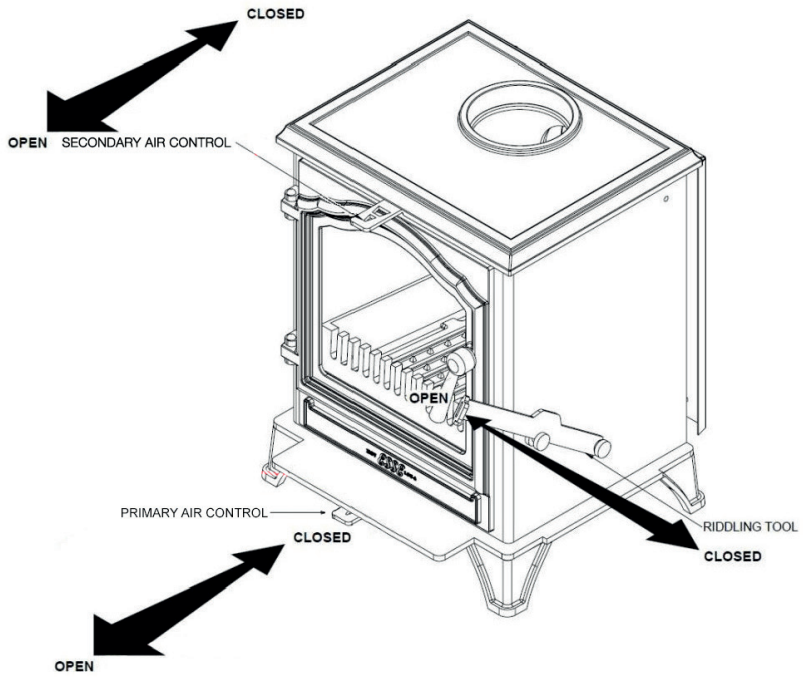


Fig.11-Riddling grate closed (wood burning).


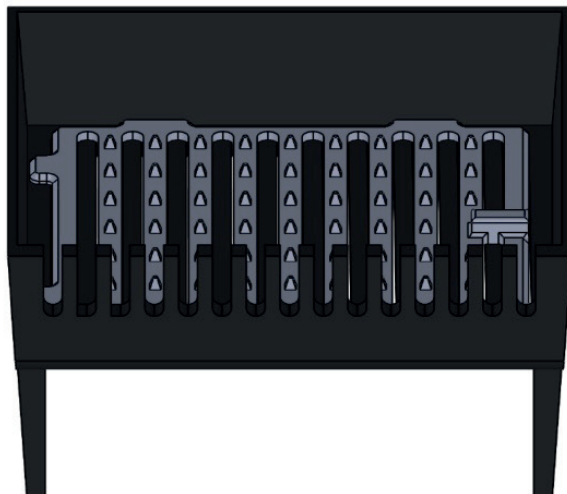


Fig.12-Riddling grate open (solid fuel burning).

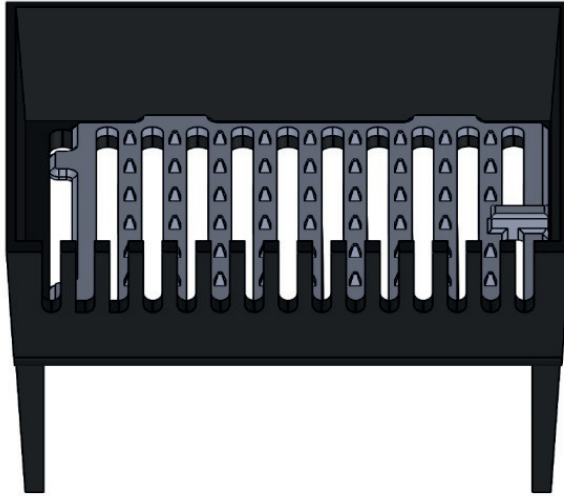

### **RE-FUELLING ON TO A LOW FIRE BED**

When adding new fuel to the stove, if there is insufficient burning fuel remaining in the fire bed to light the additional fuel, you may experience excessive smoking, as the new material struggles to light. This should be avoided by using additional kindling, if required.

### **FUEL OVERLOADING**

Burning excessive amounts of fuel over a sustained period can damage your stove. With this in mind, a maximum of 2kg of fuel should be added to the stove each hour.

### **OPERATION WITH DOOR LEFT OPEN**

Operation with the door open can cause excess smoke. The appliance must not be operated with the appliance door left open except as directed in the instructions.

### **DAMPERS LEFT OPEN**

You may experience excessive smoking if too much air is allowed into the stove throughout its use. With this in mind, the door, primary air control and flue dampers should only be left open as directed within these instructions.


## WOOD BURNING

### LIGHTING & CONTROLLING THE FIRE

Before lighting the fire ensure that all vermiculite bricks are in the correct position.

Ensure the primary air control is in the open position by pulling the control out. Open the fire door and lay two logs along the base of the fire box forming a space between them.

Fig.13-Logs laid in fire box.

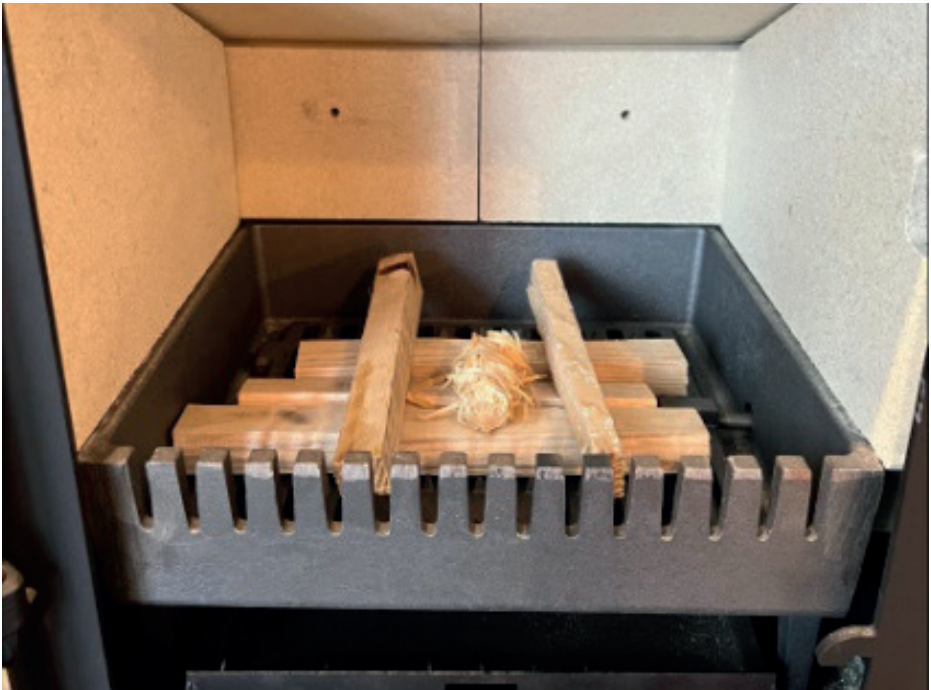

Place a firelighter in the space and surround with a small amount of kindling. Lay a third log over the top of the space perpendicular to the other logs.

Fig.14-Final log in position.



When you are ready to light the fire, simply light the firelighter.

Once the fire has been lit, leave the door partially open to allow additional airflow until the fire has become established. Once the fire is established, the door should be fully closed, and the level of the primary air control should be carefully reduced, to achieve the desired effect.



When the stove is running ALL HANDLES become hot and the operating tool or glove provided should be used to open or close the door, or adjust the air controllers.

The burning rate of the stove can now be regulated by the rate at which fuel is added and use of the air control. In order to achieve nominal heat output, the maximum amount of fuel to be loaded during normal operation is 2kg per hour.



This appliance is not an incinerator and only dry well seasoned wood or approved solid fuels should be used. Burning other solid fuels such as treated wood is not possible.

When refuelling the stove it is recommended that the logs are placed running side to side as in fig.13 as this leads to the cleanest combustion. Before lighting a full fire in the stove for the first time it is recommended that 3 smaller fires are lit first to ensure that any moisture is driven out.

## **ASH REMOVAL**

Only remove small amounts of ash from the firebox. When de-ashing, leave 30-40mm depth of ash in the bottom of the firebox for the best performance.

## **CORRECT RUNNING TEMPERATURES FOR BURNING**

To get the best results from your stove it is recommended that a wood stove thermometer (available from your stove dealer) be fitted to the flue pipe above the stove, at eye level if possible. The figures below show the recommended temperature of the flue gases:

### **115°C – 245°C**

The flue gases should be in this temperature band for the safest, most efficient and most economical operation of your stove.

### **Below 115°C**

This is below the condensation point of wood gases and may cause the build-up of tar in the chimney, dirty the stove glass and result in the inefficient burning of the fuel.

### **Above 245°C**

Too hot. Heat will be wasted up the chimney. Excess heat may damage the stove or ignite any existing accumulation of tar resulting in a chimney fire.

## **EXTENDED BURNING**

Loading a large amount of wood into the stove all at once will reduce the temperature inside the stove. If the temperature is too low, the gases given off from the wood will be too low to combust resulting in a lot of smoke covering the inside of the stove, including the glass, with soot. To combat this problem it is a good idea to increase the temperature of the stove before loading by further opening the air inlet. Load the wood and leave the air control open until the moisture is driven out of the wood and the stove is back up to an efficient operating temperature. The air inlet can then be reduced to hold the temperature of the stove. Loading the stove little and often will help keep the stove temperature steady. When loading wood, make sure that the end grain of the wood in the stove is pointing away from the glass, otherwise the moisture and gases coming from the end grain of the wood will dirty the glass.

## **TYPES OF WOOD FOR FUEL**

For best results, use well-seasoned hardwood such as Oak, Ash or Beech. Allow wood to dry out under cover in well-ventilated conditions for at least twelve months. As a rough guide wood is ready for burning when radial cracks appear in the end of logs. Properly dry wood means it should have a moisture content of between 15%-20% which can only be accurately measured using a moisture meter. Burning wood that is not seasoned will result in tar being deposited in the stove, on the glass and in the flue ways. This build-up of tar is a hazard and if it ignites may cause a chimney fire. Resinous softwood burns well and gives a high output for short periods but is not as efficient and does not last as long as hardwood.

## **RE-FUELLING**

Adding a 'little fuel often' is the best re-fuelling method to keep smoke to a minimum. Our tests have shown that burning logs no longer than 20cm and with a width or diameter of no more than 12cm will produce the optimum smoke free performance.

## **SOLID MINERAL FUEL BURNING**

### **LIGHTING AND CONTROLLING THE FIRE**

Before lighting the fire for the first time, ensure that the baffle, the riddling grate and the side and back bricks are in position. Burning without either will result in the stove overheating and being damaged.

Open the primary and secondary air control fully. Place some tightly rolled paper on top of some crumpled paper on the base towards the back of the stove. On top of this, place some small pieces of wood and on top of that a few small pieces of mineral fuel. Light the crumpled paper and close the door. Once the fire becomes established and the fuel is burning, more fuel can be added. When the stove is hot and the fuel is no longer producing smoke, the secondary air control can be reduced. The burning rate of the fire can now be controlled with the primary air control. As air from the primary air slider flows up through the grate it will cool grate preventing it from overheating and becoming damaged. Reducing the primary air control and, as a result, introducing air only from the secondary air control, will allow the fuel to burn but the grate will not be cooled resulting in damage to the grate. When controlling the fire, the air inlet should be altered gradually. Reducing the primary air dramatically and all at once on a hot stove will cause the fuel to clinker and will result in a build-up of gases and smoke which could ignite with a bang the moment air is reintroduced.



## EXTENDED BURNING

Before adding a large amount of fuel, the grate should be de-ashed and the ashpan emptied. Add the fuel sloping if from the coal bard up to the back of the stove to the level of the top of the back brick. Open the primary air control and let the fire burn for a period on high rate in order to heat the stove back up to temperature and drive off the moisture and gases in the fuel. If a lot of smoke is produced on reloading, the secondary air control can be opened further to keep the smoke back from the glass. As the fire gets back up to temperature, reduce the secondary air control and reduce the primary air inlet to suit the burning rate. The exact setting of the air controls depends on a number of variables including: the flue draught, the fuel used and the installation. So the best setting for your stove can only be learned by experience.

## ASH REMOVAL

The level of ash should not be allowed to build up to the level of the grate. If the level of ash becomes too high the air through the grate will become restricted causing the grate to overheat and preventing the fuel from burning efficiently.

## MINERAL FUELS

Ordinary bituminous house coal is not recommended and must not be burned in smoke control areas. Burning bituminous house coal will result in a sooty stove and chimney, and the stove glass will require cleaning regularly. There are numerous natural anthracites and manufactured smokeless fuels that will burn cleaning and have more reliable burning characteristics. A list of these fuels and their suitability is produced by HETAS ([www.hetas.co.uk](http://www.hetas.co.uk)). Consult your local fuel merchant to find out what is available in your area. Petro coke should not be used as it burns very hot and may damage the stove.



The above text should be used as a guide only. The ideal operation of your stove depends on a number of factors, which vary with each installation, and so gaining experience operating your stove is the only way to learn its best operation.



The stove as with any other metal products will expand and contract. A ticking noise may occur. This is normal for this type of appliance.

## TECHNICAL INFORMATION

Description	Value
Nominal Heat Output	5.0kW
Recommended chimney draught	11.5Pa
Efficiency	82.9%
Mean Flue Temperature	258°C
Particulate emissions @ 13% O <sub>2</sub> (mg/m <sup>3</sup> )	19
OGC @ 13% O <sub>2</sub> (mg/m <sup>3</sup> )	83
CO @ 13% O <sub>2</sub> (mg/m <sup>3</sup> )	1000
NOx @ 13% O <sub>2</sub> (mg/m <sup>3</sup> )	95
Energy Class	A+
Energy Index	110
Seasonal Efficiency	72.9%
Weight of stove	51kg



## DECLARATION OF PERFORMANCE

(In accordance with Regulation (EU) No. 305/2011)

**1. Unique identification code of the product type**

500 Vista / 525 / 550

**2. Product description**

500 Vista / 525 / 550

**3. Intended use of the product**

Residential roomheater fired by solid fuel without hot water supply

**4. Manufacturer**

ESSE Engineering Ltd, Ouzledale Foundry, Long Ing, Barnoldswick, Lancashire, UK, BB18 6BJ

**5. Authorised representative**

n/a

**6. System of assessment**

System 3

**7. Notified laboratory**

The notified laboratory KIWA Gastec, laboratory No. 0558 performed the determination of the product type on the basis of type testing under system 3 and issued test report Ref. 61204

**8. Declared performance**

	Wood*
• Harmonised technical specification	BS EN 13240:2001 + A2:2004
• Essential characteristics	Performance
• Fire safety	-
- Reaction to fire	A1
- Distance to combustible materials	Rear: 400mm Sides: 400mm
- Risk of burning fuel escaping	Pass
• Emission of combustible product (CO)	0.08%
• Surface Temperature	Pass
• Electrical Safety	n/a
• Cleanability	Pass
• Maximum operating pressure	n/a
• Flue gas temperature at nominal heat output	258°C
• Mechanical resistance (to carry a chimney / flue)	Pass
• Thermal properties	-
- Nominal heat output	5.0kW
- Room heating output	5.0kW
- Water heating output	n/a
• Efficiency	82.9%

\*EcoDesign Ready

**9. Conformity**

The performance of the product identified in points 1 and 2 is in conformity with the declared performance given in point 8

Signed for on behalf of the manufacturer

Signed M. Ashby Date 18/10/19

Martin Ashby  
Managing Director

R3 10/19

### CLEANING THE STOVE

The stove should only be cleaned when it is cold. The exterior can be dusted with a firm brush. Do not use a cloth, as this will drag on the paint finish leaving lint on the surface. From time to time it may be necessary to renovate the exterior by repainting. High temperature stove paints in aerosol form are available from your stove dealer. Do not use this form of paint until the stove is cold and always read the instructions on the container before starting to paint. The door glass is made of a special heat resisting ceramic and may be cleaned when cold with proprietary glass cleaning liquids and a dry cloth.

### SHUTTING DOWN THE STOVE (LONG TERM)

The following procedure should be followed if the stove is not to be used for a long period, summertime for instance. Remove all the ashes from the grate and ash pan and use a vacuum cleaner nozzle to clean ash from the base of the stove. Remove the baffle plate and brush the flue ways. Close the door and open the air inlets fully. This action will allow air circulation through the flue ways and help avoid corrosion and condensation.

### SERVICING

Regular maintenance should be carried out by a competent engineer, at least once a year.



To dispose of the stove after the product life has expired, please observe the following information:

- Dispose of the items correctly i.e. separate the parts to be disposed of in material groups.
- Always dispose of items in a way that is as sustainable as possible and that is in line with the current environmental protection, reprocessing/recycling and disposal technology.

## **GUARANTEE**

### **CONDITIONS OF GUARANTEE**

Your ESSE is guaranteed against defects arising from faulty manufacture for 2 years when supplied by an ESSE Specialist.

Your details must be registered with us by completing registration on-line at [www.esse.com](http://www.esse.com). The warranty must be registered within 1 month of installation.

The appliance must be only used for normal domestic purposes and in accordance with our instructions, be correctly installed and serviced.

The guarantee does not cover:


- Installation
- Wear and tear
- Parts deemed to be replaceable or service parts that may be replaced during the normal usage of the appliance
- Damage caused by impact, spillage, water ingress, or condensate attack from flue or by using unsuitable fuels

This guarantee is personal to the original purchaser and not transferable. Any stove or defective part replaced shall become the Company's property.

### **HOW TO PROCEED WITH A COMPLAINT**

If you have cause for dissatisfaction with your stove, you should first contact your ESSE dealer, who will bring your concerns to our attention. We will assess the nature of the complaint and either send replacement parts for your dealer to fit, or arrange for an ESSE engineer to inspect the appliance and carry out any work that may be deemed necessary. If the fault is not actually due to faulty manufacture but some other cause i.e. misuse, failure to install correctly, or failure to service at regular intervals, a charge will be made to cover the cost of the visit and any new parts required.

## 4. CONSUMABLE PARTS

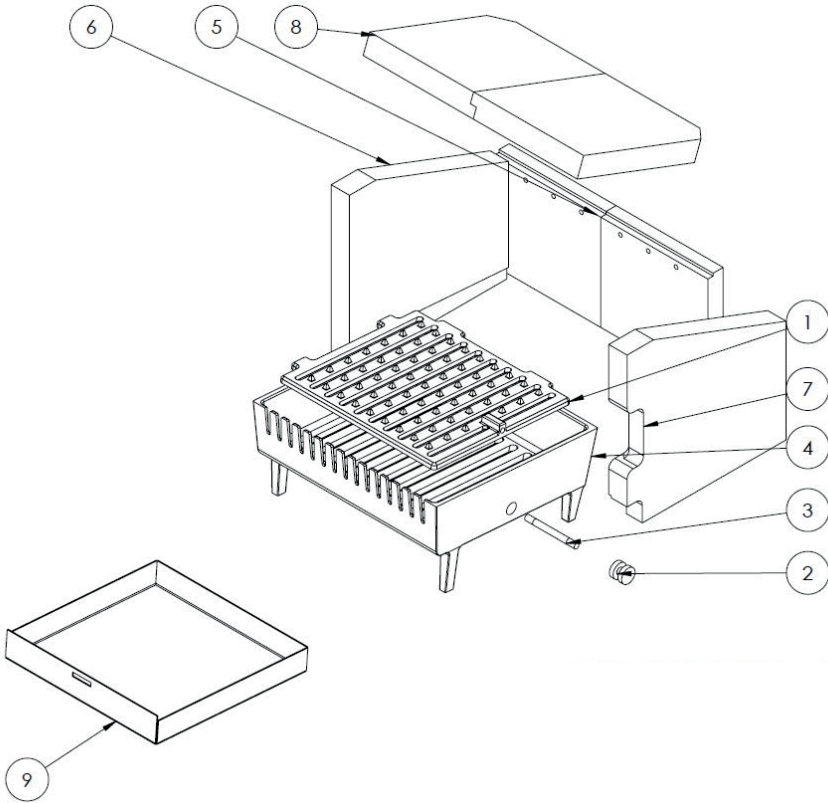

ITEM NO.	DESCRIPTION	500 CODE	525 CODE	550 CODE
1	Riddle Grate		525-019-2022	
2	Riddle Bar Guide		525-010-A	
3	Riddling Grate Bar	500-VIS-01	525-011	500-VIS-01
4	Cast Grate		FIREM-001/B-2022	
5	Rear Brick Pair		MF 525-003-2022	
6	LH Side Brick		500-VIS-02-2022	
7	RH Side Brick	500-VIS-03-2022	525-001-VERM-2022	
8	Baffle Brick (x2)		525-004-VERM	
9	Ash Pan		525-013A	





**ESSE Engineering Limited**

Long Ing Lane, Barnoldswick  
Lancashire, BB18 6BJ

**Website and On-line Store: [www.esse.com](http://www.esse.com)**